

ALLOY COVERT 29 FRAME MANUAL

Congratulations on the purchase of your Transition Bike frame. This manual will give you helpful information on how to develop a long and lasting relationship with your bike. Read every word of this manual because we may quiz you on it later.

Frame Specifications

REAR TRAVEL: 140mm (5.5")

REAR SHOCK: 200mm (7.875" x 2.25") (22.2mm x 8mm evelets)

FRAME MATERIAL: 6061 Aluminium

SIZES: Small, Medium, Large, XL

COLORS: Matte White, Amber Ale, Stealth Black

FRAME WEIGHT: TBD lbs / TBD kg (w/ shock & axle)
WARRANTY: 2 year defect warranty

Lifetime crash replacement

Build Specifications

SEATPOST/CLAMP: 31.6mm Seatpost/34.9mm Clamp
HEADTURE: 44mm/56mm Zero Stack

BOTTOM BRACKET: 73mm English Threaded
REAR DROPOUT: 142 x 12mm Shimano Standard


135 x 10mm (optional)

HANGER PART NO: 12mm: 93.1245 10mm: 93.1036

FRONT DERAILLEUR: High Direct Mount

CHAINGUIDE: ISCG 05 - 2.5mm Offset

REAR BRAKE: 160mm IS

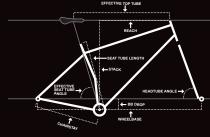

Geometry (555.7mm Axle-to-Crown & Headset)

	SMALL	MEDIUM	LARGE	XL
Reach	366.5	391.9	413.6	435.2
Stack	618.9	618.9	628.1	637.4
TopTube (Effective)	538.0	563.4	588.5	613.6
SeatTube (center-to-top)	410.1	444.5	469.9	508.0
Head Tube Angle	68°	68°	68°	68°
Seat Tube Angle*	74.7°	74.2°	73.9°	73.5°
ChainStay Length	449.0	449.0	449.0	449.0
BB Height	342.0	342.0	342.0	342.0
BB Drop	30.0	30.0	30.0	30.0
Wheelbase	1107.4	1132.8	1158.2	1183.6
Head Tube Length	100	100	110	120
0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				

⁽Length Measurements are in Millimeters)


Shock/Suspension Setup

Your frame comes equipped with a custom tuned rear shock designed to work in conjunction with the frame's leverage curve. Adjustments like rebound, compression and sag are all personal preference settings that should be adjusted to your personal riding style and preferences. Consult your shock manual for information about how to adjust your rear shock.

^{*} Measured at these saddle heights: (620mm Small, 680mm Medium, 740mm Large, 800mm Extra Large)

Cable Routing


Every Transition Bike frame has specific cable routing designed for optimal performance and safety of the rider.

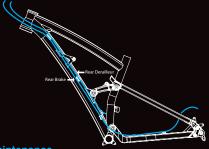

Maintenance

It is crucial to the longevity of your Transition frame that you properly maintain and inspect it. We recommend that all service be done by a qualified Transition Bikes dealer.

Before you begin any ride it is very important to inspect your entire frame for any cracks, loose pivots or bolts, and properly functioning bearings. In addition to inspecting your frame, checking your entire bike to make sure it is working properly must happen before every ride. This includes but is not limited to checking tire pressure, ensuring the wheels are secure to the frame and fork, all components and brake bolts are tight and pedals are secure. Also, a quick check of your brake pads and brakes to insure they are working properly and ready to ride. If you are unsure of what you need to check on your bike to make sure it is safe, please bring your bike to a bicycle shop to have them inspect and maintain it before you begin a ride.

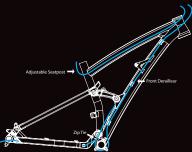

Bearings

Take apart all the linkage and rocker arms to inspect the bearings to see if they are rotating smoothly. If they do not feel smooth or are seized up, you should replace the affected bearings. Always replace bearings in pairs.

Rocker Arm Pivot Bearings Qty: 4 - 6902 Bottom Bracket Pivot Bearings Qty: 2 - 6902 Dropout Seat Stay Pivot Qty: 2 - 6900

Torque Settings

Torque ratings for the hardware used on this product are listed below. Damage caused by over/under torquing will not be covered by the warranty on this product.

- All Pivot Bolts
- Sleeved 2 piece Shock Mounting Bolt
 Main Rocker Arm Shock Mounting Bolt
- Main Rocker Arm Shock Mounting Bolt
 Rear Axle
- Dropout Bolt

150 in/lbs (16.9 N·m) 125 in/lbs (14 N·m) 200 in/lbs (22.5 N·m)

100 in/lbs (11.3 N·m) 75 in/lbs (8.4 N·m)

Warranty

Your Transition Frame is covered under a 2 year warranty period against any manufacturing defects or flaws. This does not cover normal wear and tear of the frame, misuse or crashing. This warranty only applies to the original owner of the frame 2 years from the date of purchase.

Transition Bikes also offers a lifetime crash replacement of the frame for the original owner. In the event your frame is broken due to a crash or rider negligence, Transition Bikes will offer a replacement frame at a discounted price.

Register Your Frame

To be eligible for your warranty or crash replacement you must register your frame with Transition Bikes and maintain a proof of purchase from the location you purchased the frame. Transition Bikes and your bike shop do not keep records of your serial number unless you register it with us on our site. Visit: www.transitionbikes.com/Register.cfm to register your frame.

Warning!

Riding mountain bikes is an extremely dangerous activity. The rider of any Transition Bikes frame assumes all the risk when they ride their Transition Bike. Transition Bikes assumes no liability in the event of a crash or broken frame. It is up to the rider and bike shop to properly maintain and inspect the frame for any flaws or cracks. It is the riders responsibility to ride within their limits and not push the frame beyond it's intended use.



2641 Delta Ring Rd. Ferndale, WA 98248 (360) 366-4960 www transitionbikes com

Contact Us

Kyle Young - Owner kyle@transitionbikes.com

Kevin Menard - Owner kevin@transitionbikes.com

USA Dealer Sales usa@transitionbikes.com

International Distributors distribution@transitionbikes.com

Canada Dealer Sales canada@transitionbikes.com

General Info or You Are Lonely info@transitionbikes.com

Technical Info And You Want To Be Enlightened tech@transitionbikes.com

Warranty warranty@transitionbikes.com