

# **REGULATOR SX/CX**

## **QUICK START GUIDE: Charging and Controllers**



## Powering the System On and Off

1. To turn on your bike, single-click the power button on the system controller on the top tube. The LEDs will cycle and illuminate to indicate the bike is on.
2. To turn your bike off, single-click the power button on the system controller.



## Charging the Battery


**Note:** The battery does NOT come fully charged and must be completely charged before riding. The main battery is not removable and must be charged on the bike. The PowerMore range extender and main battery cannot be charged at the same time.

1. Unplug the range extender if attached.
2. Flip open the charge port cover on the non-drive side of the bike near the lower shock mount.
3. Plug in the power cable.


The LEDs on the System Controller will start flashing to indicate the level of charge. Once the bike is fully charged the LEDs will no longer light up. You must unplug the bike to check battery level.

## Battery Level

Each bar on the system controller indicates 20% charge. Once the charge drops 10% the bar will turn white.

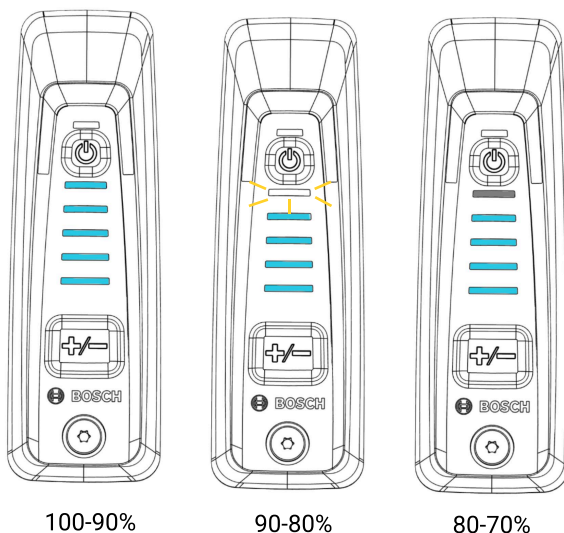

For the last 30% of battery life, the LEDs will change colors from blue and white to orange and red, to highlight to the rider that they are low on battery.

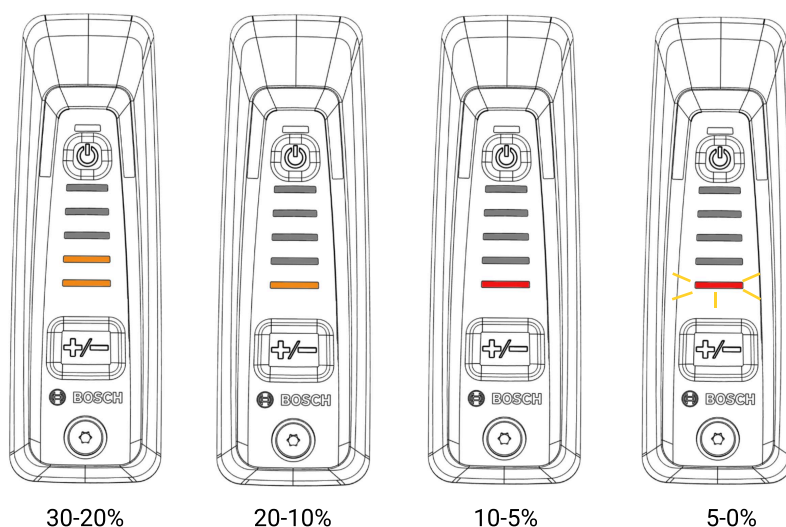

## Switching Support Modes

The Regulator comes with four default modes. The level of assistance, number of modes, and mode types can be customized in the app.


**Note:** In the event that the Mini Remote no longer works, the mode can still be adjusted using the mode adjust on the system controller on the top tube.

### Using the Mini Remote

1. Click the up button to increase the level of assistance.
2. Click the down button to decrease the level of assistance.

### Using the System Controller on the Top Tube

1. Single-click the +/- button to increase the level of assistance.
2. Press and hold the +/- button to decrease the level of assistance.

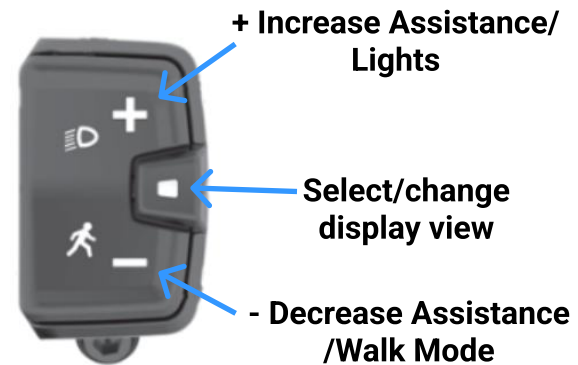

### Walk Mode

1. Press and hold the down button on the remote, until the LEDs on the system controller start lighting up.
2. Continue holding down the button while pushing the bike.

**Note:** Walk mode will not start until the bike is moved forward.


## Transition Default Assistance Modes

<b>OFF</b>	No Assistance
<b>ECO</b>	Some assistance for the best efficiency and range.
<b>TOUR+</b>	Dynamic assistance with a medium amount of power.
<b>eMTB</b>	Fast acceleration from a standstill, and most power over varied terrain.
<b>TURBO</b>	Highest level of assistance and power, even at high cadence.

Least Assistance



Most Assistance

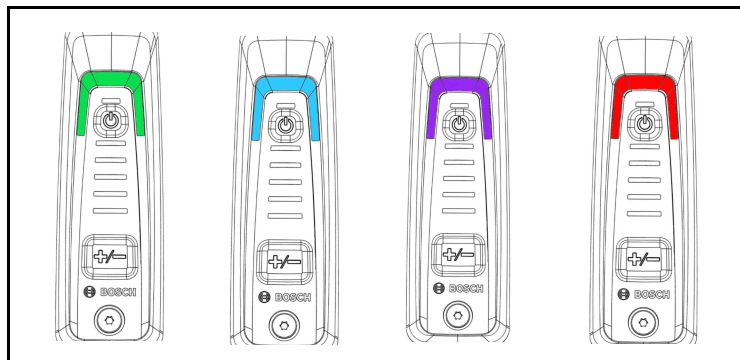

## App Connection


Connect your bike to the Bosch Flow App for more personalized riding experience. Use the app to adjust support modes, track mileage, keep an eye on battery range, and much more. For more information on the Bosch Flow App and how to connect your bike, check out the Bosch website:

[Bosch Flow App](#)

## Updating Software

On occasion, new firmware will become available that can be applied to your bike. The app will notify you of any errors of system updates. To update firmware, visit your local Bosch-certified dealer, to make the system is up to date and ready to ride. Transition dealers can become a certified Bosch dealer through QBP.

[Transition Dealer Locator](#)

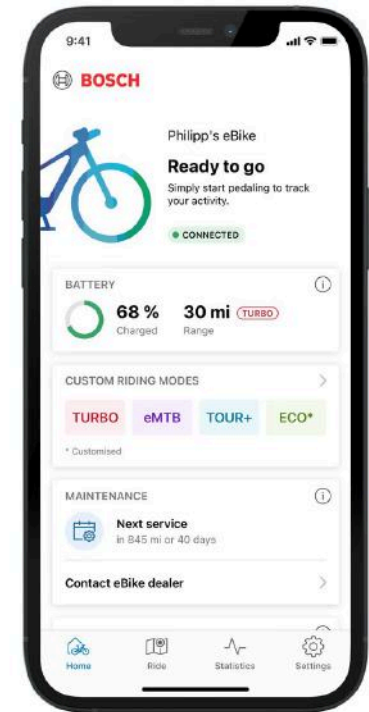

Home screen